



Envizen V100M Back Cover Replacement

This guide will show the removal process of the back cover. This will allow access to internal parts of the tablet.

Written By: nbach



INTRODUCTION

This step is used to open up the tablet so that all of the internals can be accessed.


WARNING: Use caution when removing the back cover the speakers are attached to both the back covers and the motherboard assembly



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Anti-Static Wrist Strap](#) (1)
 - [64 Bit Driver Kit](#) (1)
-

Step 1 — Back Cover

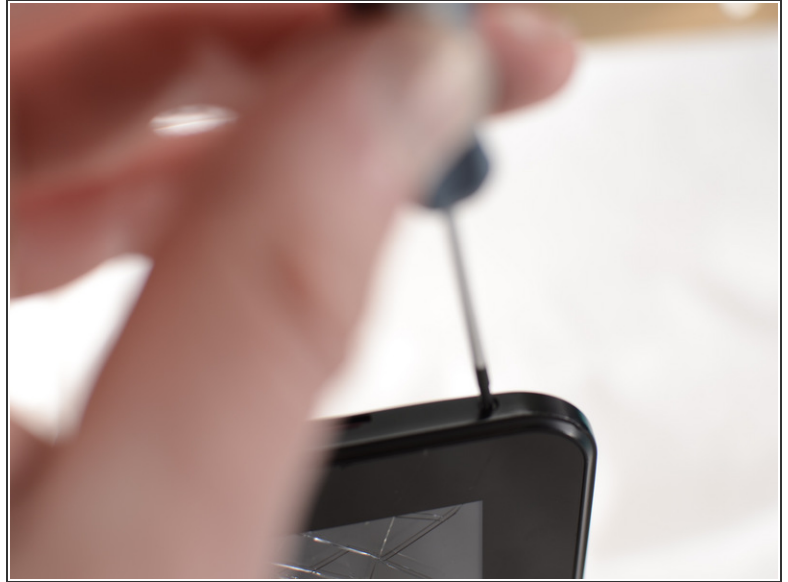

- Remove the two screws on the side of the tablet that hold the back cover in place using the ifixit PH00 screwdriver.
- The screws for the back cover are: 1.5mm diameter x 3.5mm long

⚠ When doing any work on electronic devices, always use an anti-static wrist strap!

Step 2



- With the ifixit prying tool separate the back cover from the rest of the device.

⚠ The speakers are attached to the back cover and motherboard assembly so remove carefully.

To reassemble your device, follow these instructions in reverse order.

